DIN-DMX-350-4CH

DIN-Rail CC Decoder

- Dimming interface: DMX512, RDM.
- PWM digital dimming, no alter LED color rendering index.
- Dimming range: 0~100%, LED start at 0.1% possible.
- 4CH output, 350mA per channel.
- Full protective plastic housing.
- Suitable for indoor environments.


FC CE PROHS (warranty) 5 years


Main Characteristics

Dimming Interface:	DMX512, RDM	
Input Voltage:	12~48Vdc	
Output Voltage:	3~46Vdc	
Output Current	350mA×4CH	
Output Power:	1.05W~16.1W×4CH	Max. 64.4W
Dimming Range:	0~100%	

Dimensions

Wiring Diagram

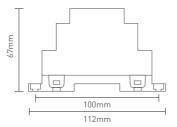

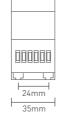

Mounting:

Product Size:

Package Size:

Weight(G.W.):

DIN Rail Mounting Size: Working Temperature:

DIN-Rail or Screw TS-35/7.5 or TS-35/15


L112×W35×H67(mm)

L114×W37×H70(mm)

-30°C~55°C

135g

DIN Rail Mounting Size TS-35/7.5 or TS-35/15

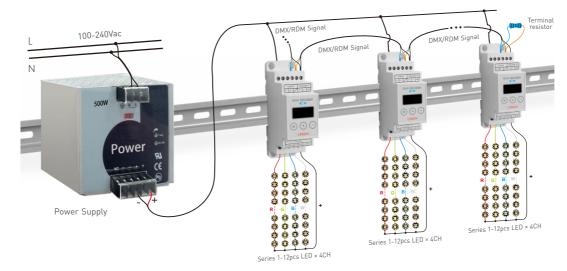

- * An amplifier is needed when more than 32 decoders are connected, signal amplification should not be more than 5 times continuously.
- * If the recoil effect occurs because of longer signal line or bad line quality, please try to connect 0.25W 90-1200 terminal resistor at the end of each line.








Terminal and key description



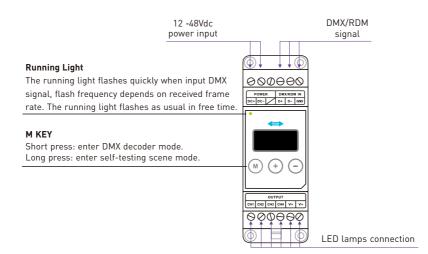

DMX Decoder Mode.

Address Setting: In DMX Decoder Mode, first press "+" or "-" key to enter address setting. Changing the DMX initial address when the 3 address value start to flicker. [Range: 001-512]

- \oplus : Short press to add one more address, long press to add quickly.
- \odot : Short press to subtract one more address, long press to subtract quickly.
- M : Short press to quit.



Long press (M) and (\div) key at the same time, set the brightness output to linearity curve (C-L).

Self-testing Scene Mode.



Long press M and \bigcirc key at the same time, set the brightness output to Gamma curve (C-E)

2





Long press (+) and (-) key at the same time, check the present luminosity curve.

Long press "M" key to enter self-testing scene mode.



Switch changing modes by pressing \oplus \bigcirc key.

N0.	Digital Tube Display (press +/- to switch)	MODE
1	P-1	Static RED
2	P-2	Static Green
3	P-3	Static Blue
4	P-4	Static Yellow
5	P-5	Static Purple
6	P-6	Static Cyan
7	P-7	Static White
8	P-8	7 Color Skipping
9	P-9	7 Color Smooth

Restore the Default Parameter:

Long press $(M \oplus \bigcirc)$ keys at the same time, Restore the default parameter, digital tube display "RES". Default Parameters: DMX decoder mode, DMX base address is 1, Gamma curve, self-test in No.1 pattern status.

