

# Intelligent LED Driver(Constant Voltage)

- Housing made from SAMSUNG/COVESTRO's V0 flame retardant PC materials.
   Screwless wire-pressing flip cover design, with detachable end caps. The length of the shell can be adjusted as needed.
   Supports full-command NFC fast programming, allowing configuration via mobile app. Users can modify dimming mode, brightness range, DALI templates, and other settings through NFC, enabling data interaction with the driver.
   Two independent SELV constant voltage output channels.
   Supports DALI-2 DT6, Push DIM, and corridor light DIM modes.
   Compatible with L-Data and DALI Part 251, 252, 253.
   Supports deep dimming from 0-100% with a minimum dimming

- Supports deep dimming from 0-100%, with a minimum dimming level of 0.01%.
  Supports wired firmware update for devices.
- Complies with the EU ERP Directive on energy efficiency, with no-load power consumption < 0.5W and network standby power consumption < 0.5W.</li>
- Innovative thermal management technology for intelligent protection of power supply lifespan.
- Overheat, over voltage, overload, short circuit protection and automatic recovery.
  Suitable for ClassI/II/III indoor light fixtures.
- Normal service life can reach 100,000 hours.
  5-year warranty (Rubycon capacitor).

# **Technical Specs**





PWM










Model		LM-75-24-G1D2F LM-75-12-G1D2F								
	Output Type	Constant voltage								
Features	Dimming Interface	DALI-2 DT6, PUSH DIM								
	Output Feature	Isolation								
	Protection Grade	IP20								
	Insulation Grade	Class II								
	Output Voltage	24V==			12V ==					
	Output Voltage Range	24V ± (	).5V <del></del>		12V ± 0.5V ==					
ОИТРИТ	Output Current	Max. 3.	125A		Max. 6.25A					
	Output Power	Max. 75	5W	<u> </u>						
	Output Power Range	0-75W								
	Strobe Level	High fre	equency exemption level							
	Dimming Range	0-100%	s, down to 0.01%							
	Overload Power Limitation	≥102%								
	Ripple	≤300m	≤300mV ≤200mV							
	PWM Frequency	300-22000Hz								
	Input AC Voltage	220-240V~								
	Input DC Voltage	220-240V == (EMI needs to be evaluated after the lamp is equipped.)								
	Frequency	50/60Hz								
	Input Current	Max. 0.4A/230V~								
INPUT	Power Factor	PF>0.98/230V~ (at full load)								
	THD	THD<10								
	Efficiency (Typ.)	92%	91%							
	Inrush Current	Cold start 45A(Test twidth=300us tested under 50% lpeak)/230Vac								
	Anti Surge	L-N: 2KV								
	Leakage Current	Max. 0.5mA								
	Working Temperature	ta: -20 ~ 50°C tc: 80°C								
	Working Humidity	20 ~ 95%RH, non-condensing								
ENVIRONMENT	Storage Temperature/Humidity	-40 ~ 80°C, 10~95%RH								
	Temperature Coefficient	±0.03%/°C(-20°C-50°C)								
	Vibration	10-500Hz, 2G 12mins/cycle, 72 min for X, Y and Z axes respectively								
	Overheat Protection	Intelligently adjust or turn off the output current if the PCB temperature ≥110°C, and recover automatically								
	Overload Protection	Automatically protect the device when the load exceeds 102% of the rated power. Automatically recover once load is reduced								
PROTECTION	Short Circuit Protection	Enter hiccup mode if short circuit occurs, and recover automatically								
	Overvoltage Protection	No-load voltage ≥ 28V; output turns off and can recover automatically. No-load voltage ≥ 16V; output turns off and can recover automatically.								
	Withstand Voltage	I/P-O/P:3750V~								
	Insulation Resistance	I/P-O/P	/P-O/P: 100MΩ/500VDC/25°C/70%RH							
		CCC China GB19510.1, GB19510.14, GB19510.213								
	Safety Standards	TUV								
		CB	CB Member States							
SAFETY			CE European Union EN61347-1, EN61347-2-13, EN62384							
&		KC	Korea	KC61347-1, KC61347-2-13						
EMC		EAC RCM	Russia Australia	IEC61347-1, IEC61347-2-13  AS 61347-1, AS 61347-2-13						
		ENEC	Europe	EN61347-1, EN61347-2-13, EN62	384					
		BIS	India	IS 15885 (PART 2/SEC 13)						
		CCC	China	GB/T17743, GB17625.1						
	EMC Emission	CE	European Union	EN55015, EN61000-3-2, EN61000-3-3, EN61547						
		KC EAC	Korea Russia	KN15, KN61547 IEC62493, IEC61547, EH55015						
		RCM	Australia	EN55015, EN61000-3-2, EN61000-3-3, EN61547						
	EMC Immunity		00-4-2,3,4,5,6,8,11,EN61547	<u> </u>						
	Power Concumption		ked standby	< 0.5W (After switching on/off via command)						
	Power Consumption	No-load power consumption		< 0.5W(When the lamp is not connected)						
ErP	Flicker/Stroboscopic Effect	IEEE178	39	Meet IEEE 1789 standard/High frequency exemption level						
	•	CIE SVM		PstLM≤1.0, SVM≤0.4						
	DF	Phase f		DF≥0.9						
OTHERS	Weight(N.W.)	290g±1	-							
	Dimensions	293×42.5×30mm(L×W×H)								




## **Product Size**

Unit:mm

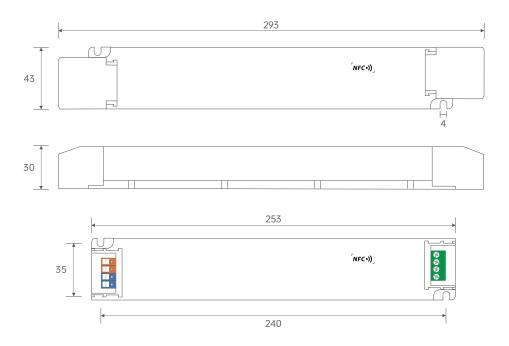

# Wiring Application Diagram

DALI Connection Method

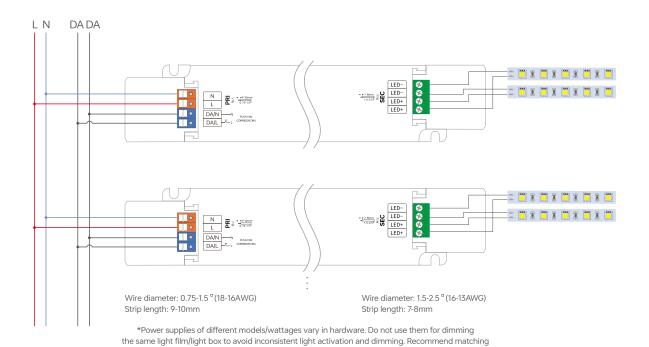


# Switch to DALI Dimming Mode

After installation according to the wiring diagram of the DALI dimming application, the driver will automatically switch to the DALI dimming mode upon receiving any DALI command.

the same light film/light box with a power supply of the same model for consistent dimming.



### PUSH DIM Connection Method

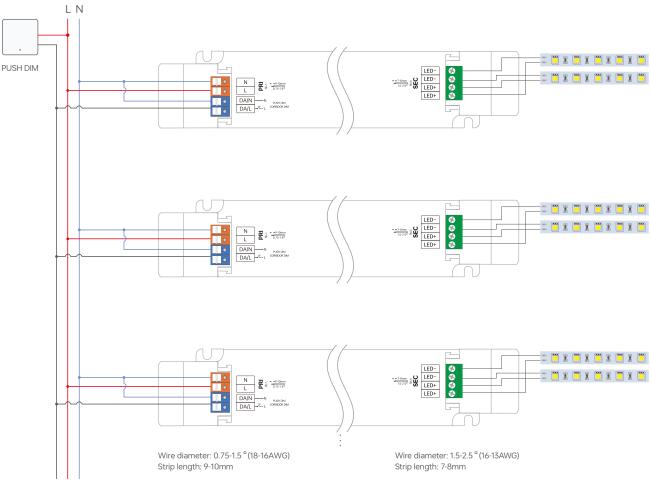

- \* Dimmer buttons are disabled under DC voltage input.
- $\mbox{\ensuremath{^{\star}}}\mbox{\ensuremath{Dimming}}$  interface priority: DALI takes precedence over PUSH DIM

\*Power supplies of different models/wattages vary in hardware. Do not use them for dimming the same light film/light box to avoid inconsistent light activation and dimming. Recommend matching the same light film/light box with a power supply of the same model for consistent dimming.

### Switch to PUSH DIM Dimming Mode:

**Method 1:** If the driver has been set to Corridor Dimming Mode, connect the wiring according to the PUSH DIM wiring diagram. Then, within 3 seconds, press the reset switch 5 times, press and hold for 6 seconds, and then press 5 times again within 3 seconds. The driver will automatically switch to PUSH DIM dimming mode.

Method 2: If the driver has been set to Corridor Mode, you can also switch to PUSH DIM dimming mode via the NFC Lighting App.

Note: If no DALI master is connected, the default factory setting is PUSH DIM mode.

### **PUSH DIM**



Short press : on/off control.


Double-click; Not available.

Long press : Adjust the current brightness.

Dimming memory: When the light is switched on/off again, the light will resumes to the previously set brightness level.



### Corridor Dimming Connection Method

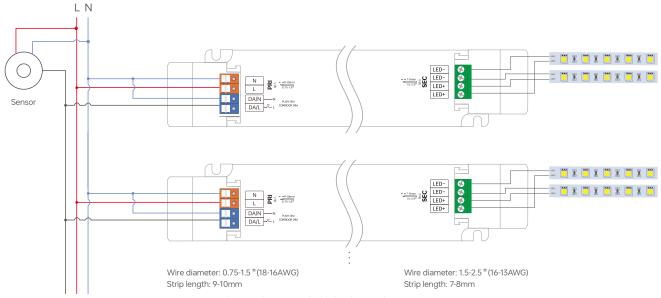

\* Dimmer buttons are disabled under DC voltage input.

\* Dimming interface priority: DALI takes precedence over Corridor light

\*Power supplies of different models/wattages vary in hardware. Do not use them for dimming the same light film/light box to avoid inconsistent light activation and dimming. Recommend matching the same light film/light box with a power supply of the same model for consistent dimming.

#### Switch to the corridor light mode


Method 1: Configure and switch the corridor light function via NFC, and the Push DIM function will be turned off.

**Method 2:** After connecting the wires according to the corridor dimming wiring diagram, keep moving within the effective sensing area for more than 2 minutes, and it will automatically switch to the corridor dimming mode with all lights on at full brightness.

**Method 3:** After connecting the wires according to the corridor dimming wiring diagram, first replace the sensor with a common switch, then turn on the common switch and keep it conducting for 2 minutes. The driver will automatically switch to the corridor dimming mode. After that, remove the common switch and replace it with the sensor again. **Note:** During normal operation, it is recommended to set the hold-time of the motion sensor to the minimum.

It is necessary to select a motion sensor with an AC switch.

### Corridor Dimming: Working Process

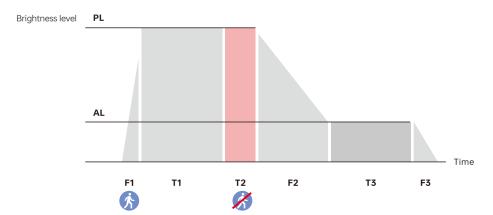

Name	Default	Setting Range				
(F1) Gradual Entry Sensing Time	1s	0-100 s				
(PL) Sensing Brightness	255	0-255				
(T1) Sensing Holding Time	Set through the sensor					
(T2) Delay Time	30 s	0 s,5 s,10 s,20 s,30 s,45 s,1 min, 2 min, 3 min,5 min,10 min,20 min,30 min				
(F2) Gradual Exit Sensing Time	1s	0-100 s				
(AL) Standby Brightness	100	0-255				
(T3) Sensing Standby Time	30 s	0 s,5 s,10 s,20 s,30 s,45 s,1 min,2 mins,3 mins,5 mins, 10 mins,20 mins,30 mins,Permanent				
(F3) Gradual Exit to Off Time	1s	0-100 s				



Note: \*If the lamp needs to be on standby at a low brightness level, the [T3] Sensing Standby Time should be set to "Permanent".

\*The above parameters are set through the NFC lighting APP.





# Protective Housing Application Diagram

# Tension plate



in the side plate position with a tool.



1. Pry up the protecting housing 2. Connect to electrical wires with a screwdriver as wiring diagram shows.



3. Press down the tension plate to fix the the electrical wires, then close the protective housing.

### Remove the protective housing










Pull the housing left and right from the bottom to remove it.

## **Installation Precautions**

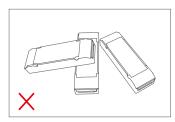


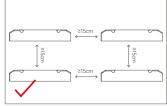

Please do not stack the products. The distance between two products should be ≥15cm so as not to affect heat dissipation and the lifespan of the products.

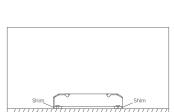

Please do not fasten the product screws tightly against the wooden board. Instead, add a washer of ≥7mm under the fixing screws. Leaving a gap can effectively dissipate heat, preventing any impact on the product's heat dissipation and service life.

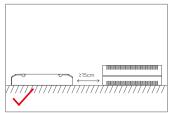

Please not place the products on LED drivers. The distance between the product and the driver should be ≥15cm so as not to affect heat dissipation and shorten the lifespan of the products.

# Use the NFC Lighting APP

Scan the QR code below with your mobile phone and follow the prompts to complete the APP installation (According to performance requirements, you need to use a NFC-capable Android phone, or an iphone 8 and later that are compatible with iOS 13 or higher).



 $oldsymbol{*}$  Before you begin setting the parameters of the driver, please make sure the driver is powered off.



#### Read/Write the LED driver

Use your NFC-capable phone to read LED driver data, then edit the parameters and they can be directly written to the driver.

#### 1.Read the LED driver

On the APP home page, click 【Read/Write LED driver】, then keep the programmer's sensing area close to the NFC sensing area of the driver to read the driver parameters.



NFC sensing area of the driver

#### 2. Edit parameters

Click on [Parameter Management] to edit more advanced parameters such as Select Brand, Dimming Type, Power-on Fading Time, Dimming Curve, PWM Frequency, and Brightness Range.


#### 3. Write to the drive

After completing the parameter settings, click [Write] in the upper right corner, and keep the programmer's sensing area close to the NFC sensing area of the driver, so the parameters can be written to the driver







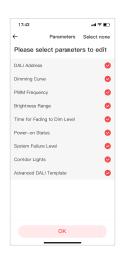

### Advanced DALI template

Integrate the functions of the DALI lighting system, edit the DALI group and lighting effects for scenes, then save them in the advanced template to achieve lighting programming. Setup page (for Read/Write LED driver): Go to App home page — click icon in the top right — 【DALI template on pnone】.













# Relationship Diagrams

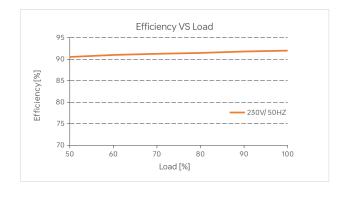


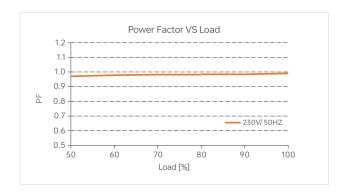


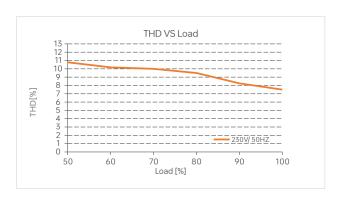


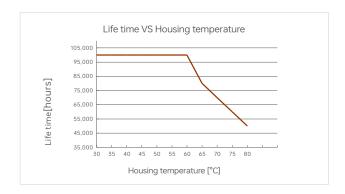


LM-75-24-G1D2F

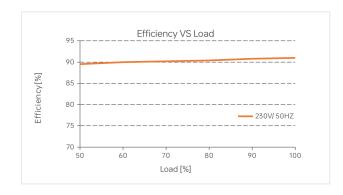

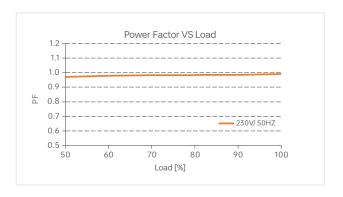

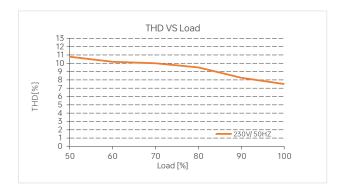

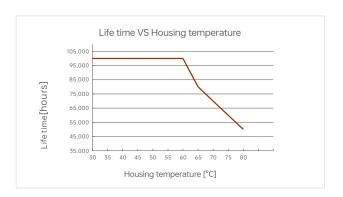

LM-75-12-G1D2F




# Surge Current & Corresponding Miniature Circuit Breaker (MCB) Load Capacity Table


MCB Model	B10	B13	B16	B20	B25	C10	C13	C16	C20	C25	D10	D13	D16	D20	D25
Maximum Load Capacity	5	7	8	10	13	8	9	10	12	15	11	12	13	16	19


#### Remarks:

- 1. Test Conditions: Cold start 45A(Test twidth=300us tested under 50% lpeak)/230V  $\sim$  .
- 2. The number of supported drivers may vary depending on the brand and model of the MCB.
- 3.It is recommended not to exceed the specified load capacity during on-site installation. The actual load should be determined based on field conditions.
- 4.If the ambient temperature exceeds 30°C or multiple MCBs are installed side by side, the number of installed drivers must be reduced and recalculated accordingly.
- 5. Electricians typically use Type B MCBs for residential lighting and Type C MCBs for commercial lighting applications.
- 6.Different testing equipment may yield variations in measured current peaks and pulse widths. Always use professional-grade instruments for accurate testing.

## Flicker Test Table

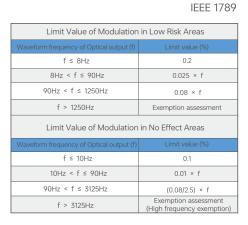

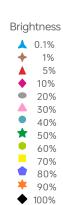

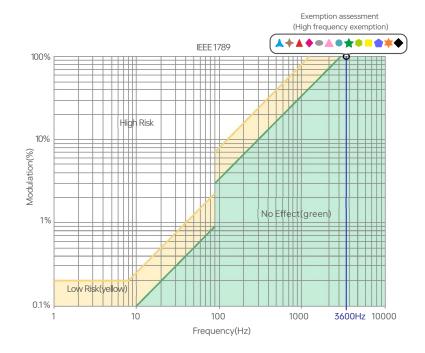

# **Packaging Specification**

Model	LM-75-24-G1D2F/LM-75-12-G1D2F
Packaging box size	315×215×240mm(L×W×H)
Quantity	10PCS per layer, 3 layers per box, 30PCS per box
Weight	0.29kg per PC, 9.6kg±5% per box

# Packaging Style Drawing



Inner packaging box



Full box packaging

Website: www.ltech-led.com



# Transportation and Storage

1. Transportation

Products can be shipped via vehicles, boats and planes.

During transportation, products should be protected from rain and sun. Please avoid severe shock and vibration during the loading and unloading process.

2. Storage

The storage conditions should comply with the Class I Environmental Standards. The products that have been stored for more than six months are recommended to be re-inspected and can be used only after they have been qualified.

#### **Attentions**

- Product installation and commissioning should be done by a qualified professional.
- LTECH products are and not lightningproof non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure they are mounted in a water proof enclosure or in an area equipped with lightning protection devices.
- Good heat dissipation will prolong the working life of products. Please ensure good ventilation.
- $\bullet \quad \text{Please check if the working voltage used complies with the parameter requirements of products}.$
- The diameter of wire used must be able to load the light fixtures you connect and ensure the firm wiring.
- · Before you power on products, please make sure all the wiring is correct in case of incorrect connection that causes damage to light fixtures.
- If a fault occurs, please do not attempt to fix products by yourself. If you have any question, please contact your suppliers.
- \* This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

# Warranty Agreement

- · Warranty periods from the date of delivery: 5 years.
- Free repair or replacement services for quality problems are provided within warranty periods.

Warranty exclusions below:

- · Beyond warranty periods.
- Any artificial damage caused by high voltage, overload, or improper operations.
- Products with severe physical damage.
- Damage caused by natural disasters and force majeure.
- Warranty labels and barcodes have been damaged.
- No any contract signed by LTECH.
- 1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law
- 2. LTECH has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.