

Intelligent LED Driver (Constant Current)

- \bullet The housing is made from V0 flame retardant PC materials from SAMSUNG/COVESTRO.
- Ultra-small, thin and light screwless end cap.
- Change the output current, fade time and other parameters on the NFC programmer or via the App, and sync the parameters to the driver.
- Set the output current down to 1mA.
- With soft-on and fade-in dimming function, enhancing your visual comfort.
- T-PWM™ Super depth dimming technology, dimming depth can reach 0.0001%
- The whole dimming process is flicker-free with high frequency exemption level.
- Comply with the EU's ErP Directive, networked standby<0.5W.
- \bullet When there is no load, the output will be 0V to prevent damage to LEDs due to poor contact.
- Overheat, over voltage, overload, short circuit protection and
- automatic recovery.
- Suitable for Class I / II / III indoor light fixtures.
- Normal service life can reach 100,000 hours.
- 5-year warranty (Rubycon capacitor)
















Technical Specs

Technical	Specs					
Model		SE-12-100-500-W1B				
	Output Type	Constar	t current			
Features	Dimming Interface	Bluetooth 5.0 SIG Mesh				
	Output Feature	Isolation				
	Protection Grade	IP20				
	Insulation Grade	Class II	(Suitable for class I/ II /I	II light fixtures)		
ОИТРИТ	Output Voltage	9-42Vdc				
	Maximum output voltage	<48Vdc				
	Output Current Range	100-500mA				
	Output Power Range	0.9W-12W				
	Dimming Range	0~100%, down to 0.0001%				
	LF Current Ripple	<3%(Maximum current for non dimming state)				
	Current Accuracy	±5%				
	PWM Frequency	≼3600Hz				
	DC Voltage Range	120-250Vdc				
	AC Voltage Range	100-240Vac				
	Input Voltage	115Vac/230Vac				
	Frequency	50/60Hz				
	Input Current	≤0.18A/115Vac, ≤0.08A/230Vac				
	Power Factor	PF>0.95/115Vac (at full load), PF>0.9C/230Vac (at full load)				
INPUT	THD	THD\(\frac{10\(\frac{1}{2}\)0\(\frac{1}\)0\(\frac{1}2\)0\(\frac{1}2\)0\(\frac{1}\)0\(\frac{1}2\)0\(\frac{1}\)0\(\frac{1}2\)0\(
	Efficiency (Typ.)	84%@700mA(at full load), 82%@500mA(at full load)				
	Inrush Current	Cold start 15A(Test twidth=102us tested under 50% Ipeak)/230Vac				
	Anti Surge	L-N: 2KV				
	Leakage Current	Max. 0.24mA				
	Working Temperature	ta: -20	~ 50°C tc: 80°C			
	Working Humidity	20 ~ 95%RH, non-condensing				
ENVIRONMENT	Storage Temperature/Humidity					
	Temperature Coefficient	±0.03%/°C(0-50°C)				
	Vibration	10-500Hz, 2G 12min/1cycle, 72 min for X, Y and Z axes respectively				
	Overload Protection	Automatically protect the device when the load exceeds 102% of the rated power. Automatically recover once load is reduced				
	Overheat Protection	Intelligently adjust or turn off the current output if the PCB temperature >110°C. When the PCB temperature <90°C, automatically recover normal output				
PROTECTION	Overvoltage Protection	Automatically protect the device when voltage exceeds the no-load voltage. It can be recovered automatically				
	Short Circuit Protection	Enter hiccup mode if short circuit occurs, and recover automatically				
	Withstand Voltage	I/P-0/P: 3750Vac				
	Insulation Resistance		P: 100MΩ/500VDC/25°0	C/70%RH		
		CCC	China	GB19510.1, GB19510.14		
		TUV	Germany	EN61347-1, EN61347-2-13, EN62493		
		СВ	CB Member States	IEC61347-1, IEC61347-2-13		
		CE	European Union	EN61347-1, EN61347-2-13, EN62384		
	Safety Standards	KC	Korea	KC61347-1, KC61347-2-13		
		EAC	Russia	IEC61347-1, IEC61347-2-13		
		RCM	Australia	AS 61347-1, AS 61347-2-13		
		ENEC	Europe	EN61347-1, EN61347-2-13, EN62384		
SAFETY		UKCA	Britain	BS EN 61347-1, BS EN 61347-2-13, BS EN 62493		
&		BIS	India	IS 15885 (PART 2/SEC 13)		
EMC		CUL	Canada	CSA C22.2 NO.250.13		
		UL	America	UL 8750		
		CCC	China	GB/T17743, GB17625.1		
	EMC Emission	CE	European Union	EN55015, EN61000-3-2, EN61000-3-3, EN61547		
		KC	Korea	KSC 9815, KSC 9547		
		EAC	Russia	IEC62493, IEC61547, EH55015		
		RCM	Australia	EN55015, EN61000-3-2, EN61000-3-3, EN61547		
		UKCA	Britain	BS EN IEC 55015, BS EN IEC 61000-3-2, BS EN 61000-3-3, BS EN 61547		
		CUL	Canada	ICES-005		
		UL	America	FCC PART 15B		
	EMC Immunity	EN61000-4-2,3,4,5,6,8,11, EN6				
	Power Consumption - Flicker/Stroboscopic Effect	Networl	ked standby	<0.5W (After shutdown by command)		
		No-load power consumption		<0.5W (When the lamp is not connected)		
ErP		IEEE 1789		Meet IEEE 1789 standard/High frequency exemption level		
		CIE SVM		Pst LM≤1.0, SVM≤0.4		
	DF	Phase factor		DF>0.9		
	Weight(N.W.)	85g±10g				
OTHERS	Dimensions		20mm(L×W×H)			
	51011310113					




Product Size

Unit: mm

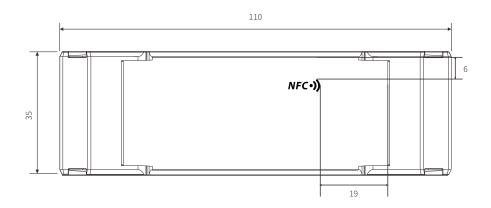



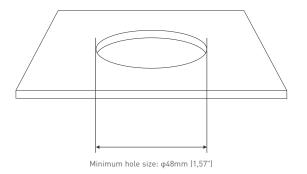

Wiring Diagram

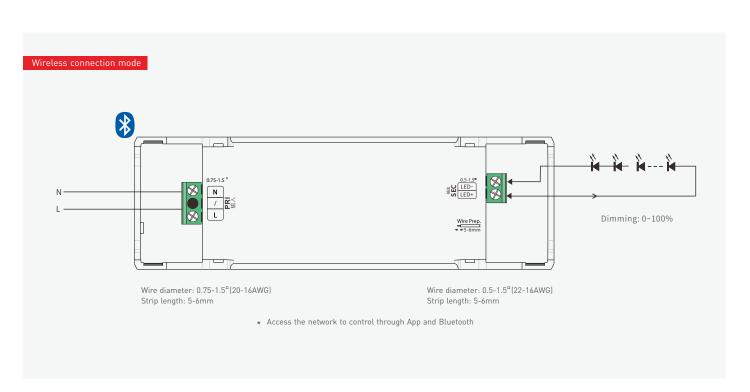




Table of Typical Corresponding Parameters for Current

The typical 9 current data sets below are for reference when selecting LED fixture models. More current levels can be set by NFC using mobile APP with 100-500mA adjustable in 1mA step								
Output Current	100mA	150mA	200mA	250mA	300mA			
Output Voltage	9-42Vdc	9-42Vdc	9-42Vdc	9-42Vdc	9-40Vdc			
Output Power	0.9-4.2W	1.35-6.3W	1.8-8.4W	2.25-10.5W	2.7-12W			
Output Current	350mA	400mA	450mA	500mA	/			
Output Voltage	9-34Vdc	9-30Vdc	9-27Vdc	9-24Vdc	/			
Output Power	3.15-11.9W	3.6-12W	4.05-12.15W	4.5-12W	/			

Application Diagram of Protective Cover



1. Use a tool to pry up the protective housing on the side panel.

 
2. Pry up the protective housing in the side plate position with a

 
3. Connect to electrical wires with a screwdriver as wiring diagram shows.

4. Press down the tension plate to fix the the electrical wires.


5. Close the protective housing.


Installation Precautions






  
Please do not stack the products. The distance between two products should be \geqslant 15cm so as not to affect heat dissipation and the lifespan of the products.






  Please do not place the products on the floor. The distance between the product and the floor should be \geqslant 100cm so as to avoid signal interference.





 Please do not place the products near a large area of metal objects (such as metal stud ceilings). The distance between the product and the metal object should be ≥15cm so as to avoid signal interference.





Please do not install the products on beams or near the corners. The distance between the product and the beam or the corner should be $\geqslant 15 \, \mathrm{cm}$ so as to avoid signal interference.

Note: The temperature within the installation area should be within the working temperature range of the products. Please do not install products inside LED fixtures to avoid temperature exceeding the working temperature that may affect the product lifetime.



Use the NFC Lighting APP

Scan the QR code below with your mobile phone and follow the prompts to complete the APP installation (According to performance requirements, you need to use a NFC-capable Android phone, or an iphone 8 and later that are compatible with iOS 13 or higher).



* Before you begin setting the parameters of the driver on the NFC programmer or via the APP, please make sure the driver is powered off.

Read/Write the LED driver

Use your NFC-capable phone to read the driver parameters, then set the output current, fade time, power-on status, other parameters. Save your settings and hold your phone close to the driver again, so the parameters can be easily written to the driver.

1 Pond the LED driver

On the APP home page, click [Read/Write LED driver], then keep the programmer's sensing area close to the NFC logo of the driver to read the driver parameters.



2. Edit the parameters

Click [Parameter settings] to edit the advanced parameters, like output current, time for fading on/off, power-on fading time, power-on status, etc.

3. Write to the driver

After completing the parameter settings, click [Write] in the upper right corner, and keep the programmer's sensing area close to the NFC logo of the driver, so the parameters can be written to the driver.













Bluetooth System Diagram

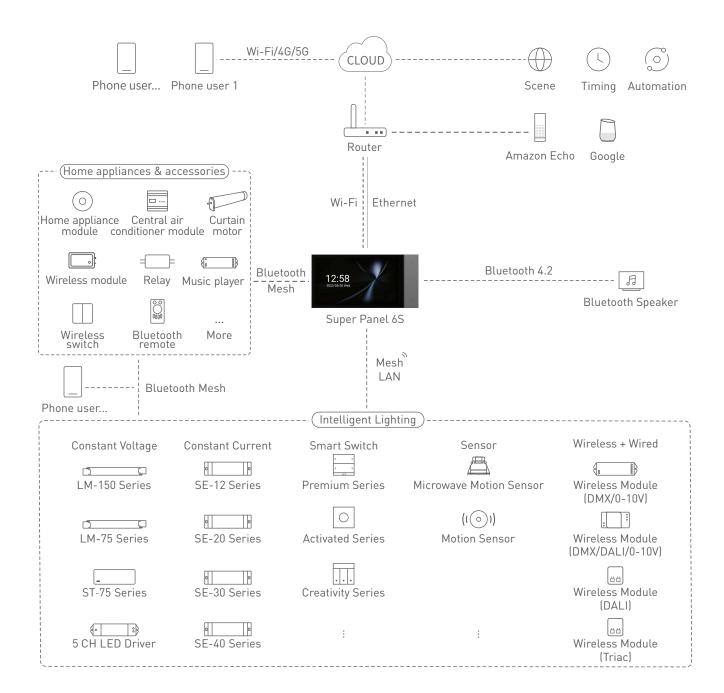


Recommend Applications

 1. Achieve fast dimming control.



  $2. \ Both \ App \ and \ remote \ can \ control \ the \ driver \ after \ connecting \ the \ remote \ to \ the \ driver \ with \ App$



3. Both App and Super Panel 6S can control the driver simultaneously after connecting the Super Panel 6S to the driver with App. By connecting the Super Panel to network, you are allowed to control the driver, cloud scenes and automation remotely with App.



 $4. \ldots .. \\ More applications of intelligent control are waiting for you to set up.$



Use with Bluetooth L-Home APP

1. Register an account

The App is available on iOS or Android devices. Scan the QR code below with you mobile phone and follow the prompts to complete the App installation. Open the App to log in or register an account.



2. Paring instructions

Open the APP and create a home if you are a new user. Click "+" icon in the upper right corner and access the "Add Device" list, then follow the prompts to add the device. Pick "Smart lighting-DIM light" from the list and follow the prompts to power on the device firstly. Make sure the device is not connected to the network. Then click "Bluetooth Search" and follow the prompts to add the device.







3. Control interface settings

After pairing up your device, go to the control interface. You'll be able to achieve your desired lighting effects by changing brightness. Click "Theme" and you'll easily switch to multiple theme lighting effects with one tap. Click "Mode" and the App provides you editable advanced modes. Customize dynamic modes to put you into a more colorful life.









4. Light groups

Users are able to combine the same type of light fixtures into a group to control them simultaneously. Once you create the group, you can set the dim level more easily. Pick "Group-DIM light group" from the list. Follow the prompts to rename the group and click "Next" to pick the lights you are going to group together and click "Save".







 
SE-12-100-500-W1B

5. Advanced functions

This driver can be linked up with gateway function devices (such as LTECH Super Panel) to achieve the advanced functions from cloud scenes to automation.









Reset The Device (Reset to factory defaults)

  
Make sure the driver is well-connected to a lamp and the lamp is on, turn it off with the switch and after 15s turn it on. After 2s, turn it off again. Repeat the same operation 6 times. When the lamp flashes 5 times, reset the device to factory defaults successfully.










Relationship Diagrams

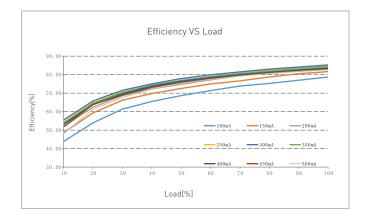

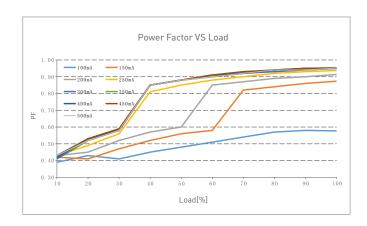

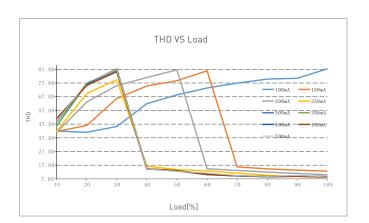


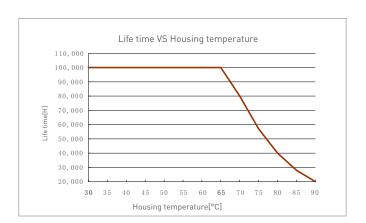

SE-10-100-500-W1B

Flicker Test Sheet

	IEEE 1/89				
Limit of modulation in low risk area					
f ≤ 8Hz	0.2				
8Hz < f ≤ 90Hz	0.025 × f				
90Hz < f ≤ 1250Hz	0.08 × f				
f > 1250Hz	Exemption assessment				
Limit of modulation in no effect area					
f ≤ 10Hz	0.1				
10Hz < f ≤ 90Hz	0.01 × f				
90Hz < f ≤ 3125Hz	(0.08/2.5)× f				
f > 3125Hz	Exemption assessment (High frequency exemption)				

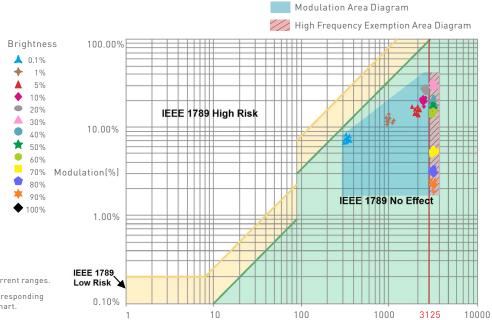

Frequency(Hz)

Marks in the right chart were tested results of different current ranges. The output frequeny is 0Hz in 100% brightness and its corresponding modulation is 0%, which could not be shown in the right chart.



Packaging Specifications

Model	SE-12-100-500-W1B	
Carton Dimensions	260×240×215mm(L×W×H)	
Quantity	20 PCS/Layer; 5 Layers/Carton; 100 PCS/Carton	
Weight	0.095kg/PC; 9.5 kg±5%/Carton	

Packaging Image



Inner Packaging Box



Carton Packaging



Transportation and Storage

1. Transportation

Products can be shipped via vehicles, boats and planes.

During transportation, products should be protected from rain and sun. Please avoid severe shock and vibration during the loading and unloading process.

2. Storage

The storage conditions should comply with the Class I Environmental Standards. The products that have been stored for more than six months are recommended to be re-inspected and can be used only after they have been qualified.

Attentions

- This product must be installed and adjusted by a qualified professional.
- LTECH products are and not lightningproof non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure they are mounted in a water proof enclosure or in an area equipped with lightning protection devices.
- $\bullet \quad \mathsf{Good\ heat\ dissipation\ will\ extend\ the\ life\ the\ product.\ Please\ install\ the\ product\ in\ a\ environment\ with\ good\ ventilation.}$
- · When you install this product, please avoid being near a large area of metal objects or stacking them to prevent signal interference.
- Please keep the product away from a intense magnetic field, a high pressure area or a place where lightning is easy to occur.
- Please check whether the working voltage used complies with the parameter requirements of the product.
- Before you power on the product, please make sure all the wiring is correct in case of incorrect connection that may cause a short circuit and damage the components, or trigger a accident
- If a fault occurs, please do not attempt to fix the product by yourself. If you have any question, please contact the supplier.
- * This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

Warranty Agreement

- Warranty periods from the date of delivery: 5 years.
- $\bullet \quad \text{Free repair or replacement services for quality problems are provided within warranty periods}.$

Warranty exclusions below:

- Beyond warranty periods.
- Any artificial damage caused by high voltage, overload, or improper operations.
- Products with severe physical damage
- Damage caused by natural disasters and force majeure.
- Warranty labels and barcodes have been damaged.
- No any contract signed by LTECH.
- 1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.
- $2.\,\mathsf{LTECH}\ \mathsf{has}\ \mathsf{the}\ \mathsf{right}\ \mathsf{to}\ \mathsf{amend}\ \mathsf{or}\ \mathsf{adjust}\ \mathsf{the}\ \mathsf{terms}\ \mathsf{of}\ \mathsf{this}\ \mathsf{warranty}, \ \mathsf{and}\ \mathsf{release}\ \mathsf{in}\ \mathsf{written}\ \mathsf{form}\ \mathsf{shall}\ \mathsf{prevail}.$

ZHUHAI LTECH TECHNOLOGY CO., LTD.

Update Log

Version	Updated Time	Update Content	Updated by
Α0	20231028	Original version	Yang Weiling