

Intelligent Tunable White LED Driver (Constant Current)

- \bullet The housing is made from V0 flame retardant PC materials from SAMSUNG/COVESTRO.
- Ultra-small, thin and light screwless end cap.
- Change the output current, fade time and other parameters on the NFC programmer or via the App, and sync the parameters to the driver.
- Set the output current down to 1mA.
- With soft-on and fade-in dimming function, enhancing your visual comfort.
- T-PWM $^{\text{TM}}$ Super depth dimming technology, dimming depth can reach 0.0001% Flicker Free
- The whole dimming process is flicker-free with high frequency exemption level. IEEE 1789
- Comply with the EU's ErP Directive, networked standby<0.5W.
- \bullet When there is no load, the output will be 0V to prevent damage to LEDs due to poor contact.
- Overheat, over voltage, overload, short circuit protection and
- Suitable for Class I / II / III indoor light fixtures.
- Normal service life can reach 100,000 hours.
- 5-year warranty (Rubycon capacitor)




































Technical Specs

| Model | | SE-12-1 | 100-500-W2B | | | | |
|------------|------------------------------------|--|--|---|--|--|--|
| | Output Type | Constant current | | | | | |
| | Dimming Interface | | th 5.0 SIG Mesh | | | | |
| Features | Output Feature | Isolation | | | | | |
| | Protection Grade | IP20 | | | | | |
| | Insulation Grade | | (Suitable for class I/ II / | III light fixtures | | | |
| | Output Voltage | Class II (Suitable for class I/ II /III light fixtures) | | | | | |
| | Maximum output voltage | 9-42Vdc | | | | | |
| | Output Current Range | ≤48Vdc | | | | | |
| OUTPUT | Output Power Range | 100-500mA 0.9W-12W | | | | | |
| | Dimming Range | 0-100%, down to 0.0001% | | | | | |
| | | <3%[Maximum current for non dimming state] | | | | | |
| | LF Current Ripple Current Accuracy | | | | | | |
| | , | ±5% ≼3600Hz | | | | | |
| | PWM Frequency | 120-250Vdc | | | | | |
| | DC Voltage Range | 100-240Vac | | | | | |
| | AC Voltage Range | | | | | | |
| | Input Voltage | 115Vac/230Vac | | | | | |
| | Frequency | 50/60Hz | | | | | |
| | Input Current | <0.18A/115Vac, <0.08A/230Vac DE 0.05/315Vac, <0.464U, Inc. 1) DE 0.05/230Vac (at 64U Inc. 1) | | | | | |
| INDUT | Power Factor | PF>0.95/115Vac (at full load), PF>0.9C/230Vac (at full load) | | | | | |
| INPUT | THD | THD<10%/230Vac, at full load | | | | | |
| | Efficiency (Typ.) | 84%@300mA(at full load), 82%@500mA(at full load) | | | | | |
| | Inrush Current | Cold start 15A(Test twidth=102us tested under 50% peak)/230Vac | | | | | |
| | Anti Surge | L-N: 2KV | | | | | |
| | Leakage Current | Max. 0.5mA | | | | | |
| | Working Temperature | | - 50°C tc: 80°C | | | | |
| | Working Humidity | 20 ~ 95%RH, non-condensing | | | | | |
| NVIRONMENT | Storage Temperature/Humidity | -40 ~ 80°C/10~95%RH | | | | | |
| | Temperature Coefficient | ±0.03%/°C(0-50°C) | | | | | |
| | Vibration | | 10-500Hz, 2G 12min/1cycle, 72 min for X, Y and Z axes respectively | | | | |
| | Overload Protection | Automa | tically protect the device | e when the load exceeds 102% of the rated power. Automatically recover once load is reduced | | | |
| PROTECTION | Overheat Protection | Intellige | Intelligently adjust or turn off the current output if the PCB temperature >110°C. When the PCB temperature <90°C, automatically recover normal outp | | | | |
| ROTECTION | Overvoltage Protection | Automatically protect the device when voltage exceeds the no-load voltage. It can be recovered automatically | | | | | |
| | Short Circuit Protection | Enter hiccup mode if short circuit occurs, and recover automatically | | | | | |
| | Withstand Voltage | I/P-0/P: 3750Vac | | | | | |
| | Insulation Resistance | I/P-0/F | P: 100MΩ/500VDC/25°0 | C/70%RH | | | |
| | | CCC | China | GB19510.1, GB19510.14 | | | |
| | | TUV | Germany | EN61347-1, EN61347-2-13, EN62493 | | | |
| | | CB | CB Member States | IEC61347-1, IEC61347-2-13 | | | |
| | | CE | European Union | EN61347-1, EN61347-2-13, EN62384 | | | |
| | Safety Standards | KC | Korea | KC61347-1, KC61347-2-13 | | | |
| | | EAC | Russia | IEC61347-1, IEC61347-2-13 | | | |
| | | RCM | Australia | AS 61347-1, AS 61347-2-13 | | | |
| | | ENEC | Europe | EN61347-1, EN61347-2-13, EN62384 | | | |
| SAFETY | | UKCA | Britain | BS EN 61347-1, BS EN 61347-2-13, BS EN 62493 | | | |
| & | | BIS | India | IS 15885 (PART 2/SEC 13) | | | |
| EMC | | CUL | Canada | CSA C22.2 NO.250.13 | | | |
| | | UL | America | UL 8750 | | | |
| | EMC Emission | CCC | China | GB/T17743, GB17625.1 | | | |
| | | CE | European Union | EN55015, EN61000-3-2, EN61000-3-3, EN61547 | | | |
| | | KC | Korea | KSC 9815, KSC 9547 | | | |
| | | EAC | Russia | IEC62493, IEC61547, EH55015 | | | |
| | | RCM | Australia | EN55015, EN61000-3-2, EN61000-3-3, EN61547 | | | |
| | | UKCA | Britain | BS EN IEC 55015, BS EN IEC 61000-3-2, BS EN 61000-3-3, BS EN 61547 | | | |
| | | CUL | Canada | ICES-005 | | | |
| | | UL | America | FCC PART 15B | | | |
| | EMC Immunity | EN61000-4-2,3,4,5,6,8,11, EN | | | | | |
| | D 0 :: | Networked standby | | <0.5W (After shutdown by command) | | | |
| | Power Consumption | No-load power consumption | | <0.5W (When the lamp is not connected) | | | |
| ErP | | IEEE 1789 | | Meet IEEE 1789 standard/High frequency exemption level | | | |
| EIP | Flicker/Stroboscopic Effect | | | | | | |
| | 1 | CIE SVM | | Pst LM≼1.0, SVM≼0.4 | | | |
| | DE. | DI 1 | | | | | |
| | DF(N)W) | Phase fa | | DF>0.9 | | | |
| OTHERS | DF Weight(N.W.) Dimensions | 85g±10g | | DF > 0.9 | | | |




Product Size

Unit: mm

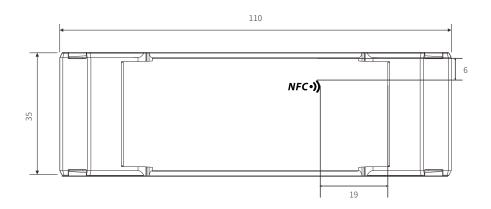



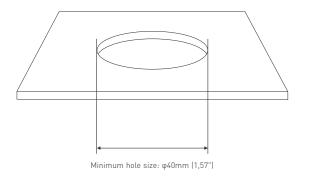

Wiring Diagram

Wire diameter: 0.75-1.5°(20-16AWG)
Strip length: 5-6mm

* Access the network to control through App and Bluetooth



Table of Typical Corresponding Parameters for Current

| The typical 9 current data sets below are for reference when selecting LED fixture models. More current levels can be set by NFC using mobile APP with 100-500mA adjustable in 1mA step | | | | | | | | |
|---|------------|-----------|-------------|------------|---------|--|--|--|
| Output Current | 100mA | 150mA | 200mA | 250mA | 300mA | | | |
| Output Voltage | 9-42Vdc | 9-42Vdc | 9-42Vdc | 9-42Vdc | 9-40Vdc | | | |
| Output Power | 0.9-4.2W | 1.35-6.3W | 1.8-8.4W | 2.25-10.5W | 2.7-12W | | | |
| | | | | | | | | |
| Output Current | 350mA | 400mA | 450mA | 500mA | / | | | |
| Output Voltage | 9-34Vdc | 9-30Vdc | 9-27Vdc | 9-24Vdc | / | | | |
| Output Power | 3.15-11.9W | 3.6-12W | 4.05-12.15W | 4.5-12W | / | | | |

Protective Housing Application Diagram



Use a tool to pry up the protective
 housing on the side panel.


2. Pry up the protective housing in the side plate position with a

3. Connect to electrical wires with a screwdriver as wiring diagram shows.


4. Press down the tension plate to fix the the electrical wires.

5. Close the protective housing.


Installation Precautions

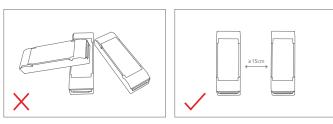


Please do not stack the products. The distance between two products should be \geqslant 15cm so as not to affect heat dissipation and the lifespan of the products.

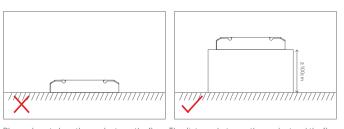



Please do not place the products on the floor. The distance between the product and the floor should be $\geqslant 100\,\mathrm{cm}\,\mathrm{so}$ as to avoid signal interference.

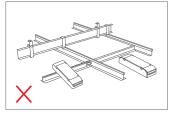

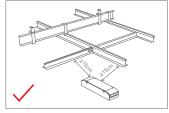

Please do not place the products near a large area of metal objects (such as metal stud ceilings). The distance between the product and the metal object should be \geqslant 15cm so as to avoid signal interference.

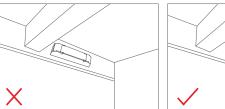

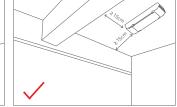

Please do not install the products on beams or near the corners. The distance between the product and the beam or the corner should be $\geqslant 15$ cm so as to avoid signal interference.

Note: The temperature within the installation area should be within the working temperature range of the products. Please do not install products inside LED fixtures to avoid temperature exceeding the working temperature that may affect the product lifetime.



Use the NFC Lighting APP

Scan the QR code below with your mobile phone and follow the prompts to complete the APP installation (According to performance requirements, you need to use a NFC-capable Android phone, or an iphone 8 and later that are compatible with iOS 13 or higher).



* Before you begin setting the parameters of the driver on the NFC programmer or via the APP, please make sure the driver is powered off

Read/Write the LED driver

Use your NFC-capable phone to read the driver parameters, then set the output current, fade time, power-on status, other parameters. Save your settings and hold your phone close to the driver again, so the parameters can be easily written to the driver.

1 Pead the LED driver

On the APP home page, click [Read/Write LED driver], then keep the programmer's sensing area close to the NFC logo of the driver to read the driver parameters.



2. Edit the parameters


Click [Parameter settings] to edit the advanced parameters, like output current, time for fading on/off, power-on fading time, power-on status, etc.

3. Write to the driver

After completing the parameter settings, click [Write] in the upper right corner, and keep the programmer's sensing area close to the NFC logo of the driver, so the parameters can be written to the driver.






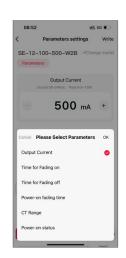






Bluetooth System Diagram

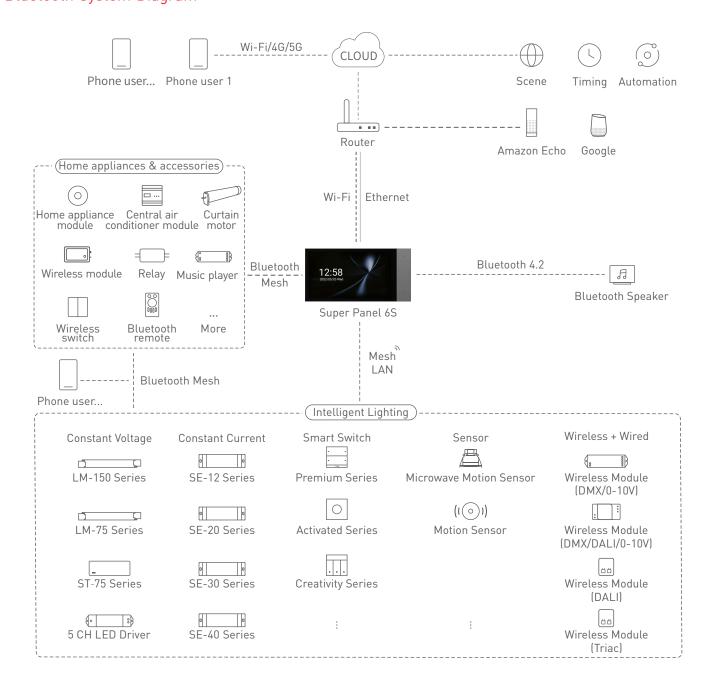


Recommend Applications

1. Achieve fast dimming control.

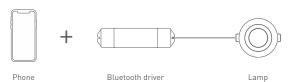

 $2. \ Both \ App \ and \ remote \ can \ control \ the \ driver \ after \ connecting \ the \ remote \ to \ the \ driver \ with \ App$

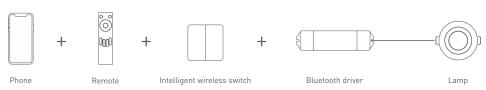

3. Both App and Super Panel 6S can control the driver simultaneously after connecting the Super Panel 6S to the driver with App. By connecting the Super Panel to network, you are allowed to control the driver, cloud scenes and automation remotely with App.



 $4. \ \dots \\ More applications of intelligent control are waiting for you to set up.$



Use with Bluetooth L-Home APP

1. Register an account

The App is available on iOS or Android devices. Scan the QR code below with you mobile phone and follow the prompts to complete the App installation. Open the App to log in or register an account.



2. Paring instructions

Open the APP and create a home if you are a new user. Click "+" icon in the upper right corner and access the "Add Device" list, then follow the prompts to add the device. Pick "Smart lighting-CT light" from the list and follow the prompts to power on the device firstly. Make sure the device is not connected to the network. Then click "Bluetooth Search" and follow the prompts to add the device.







3. Control interface settings

After pairing up your device, go to the control interface. You'll be able to achieve your desired lighting effects by changing brightness and color temperature. Click "Theme" and you'll easily switch to multiple theme lighting effects with one tap. Click "Mode" and the App provides you editable advanced modes. Customize dynamic modes to put you into a more colorful life.









4. Light groups

Users are able to combine the same type of light fixtures into a group to control them simultaneously. Once you create the group, you can set the dim level and adjust the color temperature more easily. Pick "Group-CT light group" from the list. Follow the prompts to rename the group and click "Next" to pick the lights you are going to group together and click "Save".







5. Advanced functions

This driver can be linked up with gateway function devices (such as LTECH Super Panel) to achieve the advanced functions from cloud scenes to automation.








Reset The Device (Reset to factory defaults)

Make sure the driver is well-connected to a lamp and the lamp is on, turn it off with the switch and after 15s turn it on. After 2s, turn it off again. Repeat the same operation 6 times. When the lamp flashes 5 times, reset the device to factory defaults successfully.

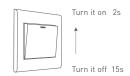


Under the driver being power-on


Turn it off — 15s Turn it on — 2s


[Repeat 6 times]




Relationship Diagrams

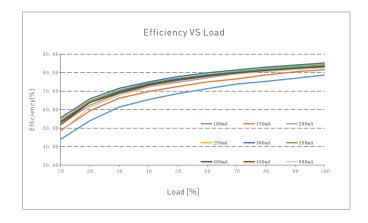

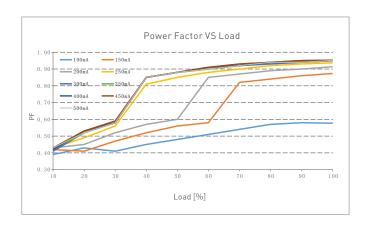

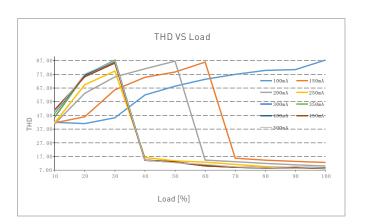


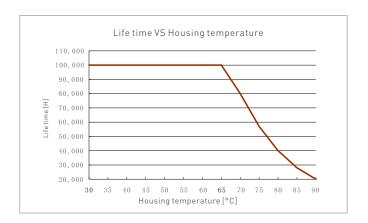


Modulation Area Diagram

SE-12-100-500-W2D

Flicker Test Sheet

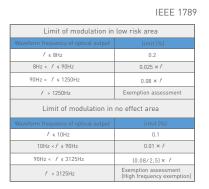

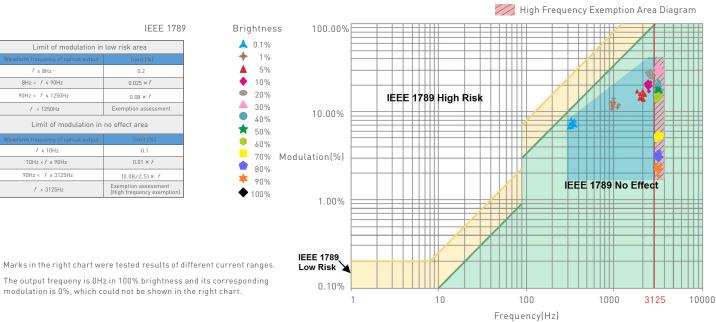

The output frequeny is 0Hz in 100% brightness and its corresponding modulation is 0%, which could not be shown in the right chart.



Packaging Specifications

| Model | SE-12-100-500-W2B | |
|-------------------|---|--|
| Carton Dimensions | 260×240×215mm(L×W×H) | |
| Quantity | 20 PCS/Layer; 5 Layers/Carton; 100 PCS/Carton | |
| Weight | 0.095 kg/PC; 9.5 kg±5%/Carton | |

Packaging Image



Inner Packaging Box



Carton Packaging



Transportation and Storage

1. Transportation

Products can be shipped via vehicles, boats and planes.

During transportation, products should be protected from rain and sun. Please avoid severe shock and vibration during the loading and unloading process.

2. Storage

The storage conditions should comply with the Class I Environmental Standards. The products that have been stored for more than six months are recommended to be re-inspected and can be used only after they have been qualified.

Attentions

- This product must be installed and adjusted by a qualified professional.
- LTECH products are and not lightningproof non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure they are mounted in a water proof enclosure or in an area equipped with lightning protection devices.
- $\bullet \quad \mathsf{Good} \ \mathsf{heat} \ \mathsf{dissipation} \ \mathsf{will} \ \mathsf{extend} \ \mathsf{the} \ \mathsf{life} \ \mathsf{the} \ \mathsf{product}. \ \mathsf{Please} \ \mathsf{install} \ \mathsf{the} \ \mathsf{product} \ \mathsf{in} \ \mathsf{a} \ \mathsf{environment} \ \mathsf{with} \ \mathsf{good} \ \mathsf{ventilation}.$
- · When you install this product, please avoid being near a large area of metal objects or stacking them to prevent signal interference.
- Please keep the product away from a intense magnetic field, a high pressure area or a place where lightning is easy to occur.
- · Please check whether the working voltage used complies with the parameter requirements of the product.
- Before you power on the product, please make sure all the wiring is correct in case of incorrect connection that may cause a short circuit and damage the components, or trigger a accident
- If a fault occurs, please do not attempt to fix the product by yourself. If you have any question, please contact the supplier.
- * This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

Warranty Agreement

- · Warranty periods from the date of delivery: 5 years.
- $\bullet \quad \text{Free repair or replacement services for quality problems are provided within warranty periods}.$

Warranty exclusions below:

- Beyond warranty periods.
- Any artificial damage caused by high voltage, overload, or improper operations.
- Products with severe physical damage.
- Damage caused by natural disasters and force majeure.
- Warranty labels and barcodes have been damaged.
- No any contract signed by LTECH.
- 1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.
- $2.\,\mathsf{LTECH}\ \mathsf{has}\ \mathsf{the}\ \mathsf{right}\ \mathsf{to}\ \mathsf{amend}\ \mathsf{or}\ \mathsf{adjust}\ \mathsf{the}\ \mathsf{terms}\ \mathsf{of}\ \mathsf{this}\ \mathsf{warranty}, \ \mathsf{and}\ \mathsf{release}\ \mathsf{in}\ \mathsf{written}\ \mathsf{form}\ \mathsf{shall}\ \mathsf{prevail}.$

ZHUHAI LTECH TECHNOLOGY CO., LTD.



Update Log

| Version | Updated Time | Update Content | Updated by |
|---------|--------------|------------------|--------------|
| Α0 | 20230728 | Original version | Yang Weiling |